

It may not be necessary to perform all these steps if you're only replacing the motor. These instructions are provided as a guide. If you have questions, contact Jac Citera – 631.477.2400, x135 or jcitera@stidd.com

Before beginning to replace the Fore/Aft motor, disable power to seat! This is the view from under the seat. Three screws will separate the Switch Tray from the seat exposing the Fore/Aft motor.




Remove screw as shown.


Disconnect two wires from switch assembly.



Rotate motor $\frac{1}{4}$ turn while pulling motor to back of seat. This will separate motor from front end cap.

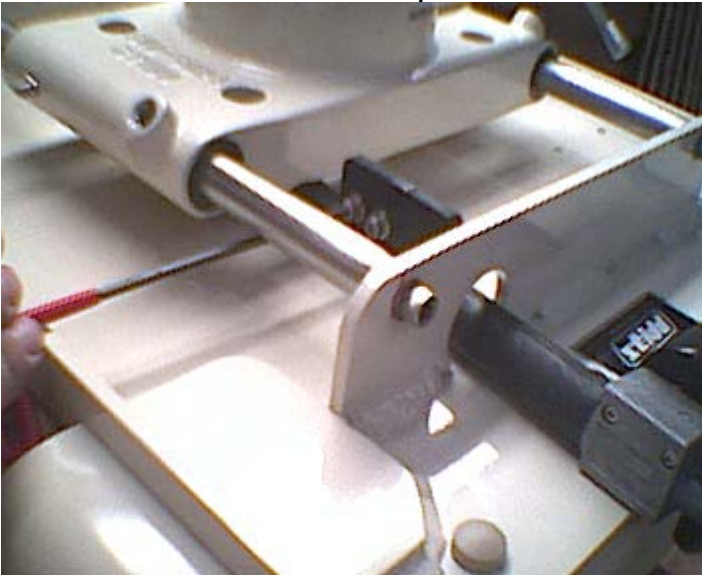


Remove black plastic tab by removing two allen screws.

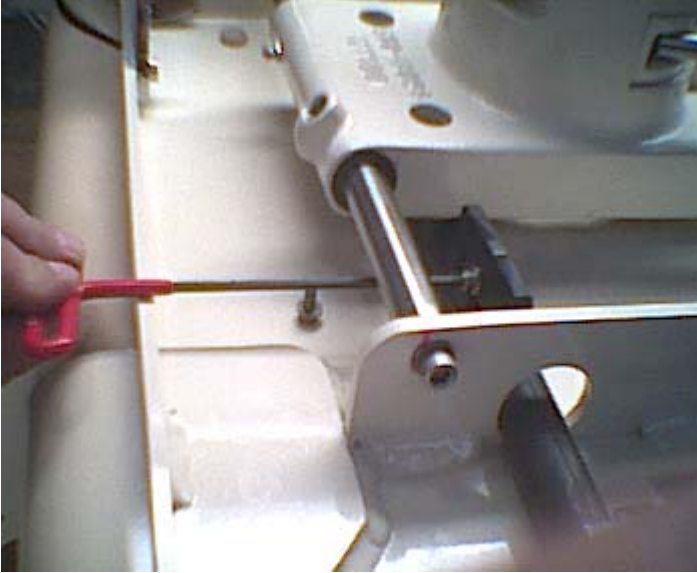

Remove old motor and install new motor by following previous steps in reverse.



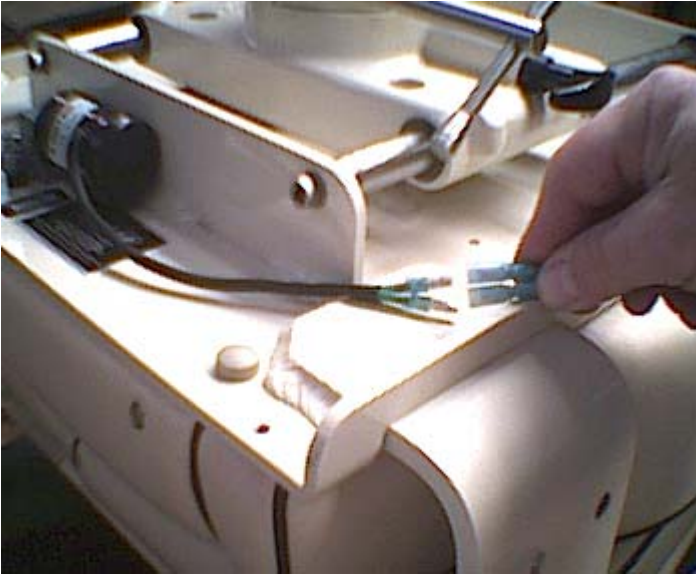

Connect power leads to motor.



Make sure red is to red and black is to black.

It is also advisable to power up the seat and test the motor before the switch tray is re-installed. If the motor works properly, re-install the switch tray; be sure not to pinch any wires. If there is any problems, call Jac Citera at 631 477-2400, ext. 135.

